



**Commercial refrigeration range**

# User Manual



To ensure safe operation, please read this instruction manual thoroughly before use.

**Pentland Wholesale Ltd, Blizzard House, Unit17 Walker Industrial Estate, Walker Road, Blackburn, Lancashire, BB1 2QE.**

**Tel: 01254 614444,**

**[www.pentlandwholesale.co.uk](http://www.pentlandwholesale.co.uk)**

## Welcome to your new chiller

Thank you for buying this commercial chiller. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains safety information, and tips to ensure you receive from your chiller.



### **WARNING: RISK OF ELECTRICAL SHOCK**

#### **HAZARD This unit must be earthed.**

If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the chiller.

## DISPOSAL OF OLD APPLIANCES

**BE SURE TO MAKE ANY LOCKS UNUSABLE, REMOVE ANY DOOR(S) AND DISCARD SEPARATELY.**

**WARNING-CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY DISPOSAL PROCEDURES.**

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials in a refrigerator can be recycled. Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions.

Please ensure the pipe work of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

## **DISPOSAL OF PACKAGING**

**Do not allow children to play the packaging, and destroy plastic bags safely.**

The cardboard maybe broken or cut into smaller pieces and given to a wastepaper disposal service. The wrapping foil is made of polyethylene. The polyethylene pads and stuffing contain no fluorochloric hydrocarbons.

All these valuable materials may be taken to a waste collecting depot and used again after adequate recycling. Consult your local authority for the name and address of the wastepaper

## **IMPORTANT SAFETY INSTRUCTIONS**

Before switching on your chiller for the first time, read the information in this user manual carefully. The manual contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this booklet in a safe place for future reference. If you ever sell your chiller, hand this user manual to the new owner.

The manufacture does not accept responsibility for any damages that may arise due to non- observation of these instructions. The user is liable for any material damage or bodily injury (product liability) cause by using the refrigerator carelessly or failing to follow instructions.

## CAUTION:

- Do not use damaged appliances. If you are in any doubt, consult an engineer.
- Connection and installation of your chiller are to be carried out in strict compliance with the relative instructions in this manual.
- For safety, the appliance must be properly earthed in accordance with specifications
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Always remember to unplug the appliance before cleaning. Never unplug your appliance by pulling on the power cable. Always grip plug firmly and pull straight out from the socket. Always check that the plug and cable are undamaged.
- All repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous. Never try to repair the refrigerator yourself.
- Should the cover of the interior light or fan fall off or break, switch the refrigerator off immediately and replace the cover.
- Ensure your chosen location has a flat and stable surface. The unit may be leveled by turning either or both of the adjustable feet in the front corners. Check the unit is level using a spirit level.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- Allow at least 100mm of space between the unit's side, rear, and the wall for ventilation.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended for use indoor, such as shopping center, barroom, restaurant and so on, but not for household use.
- This appliance noise is less than 55dB.
- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with the appliance, or to sit on it or to hang onto the door.
- Make sure there is a suitable power Outlet (220-240V, 50Hz) with proper grounding to power the refrigerator.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Do not position this appliance with its rear panel directly against a wall. For good circulation and operating efficiency, the ventilation grilles must never be blocked. Ventilation should be provided above and to each side of the unit and must never be built into a cupboard.
- The maximum load for a shelf is 15Kg.

## BEFORE USING FOR THE FIRST TIME

Remove all packaging and place the chiller on a stable, secure flat surface. Position the chiller away from heat sources, where the unit is well-ventilated and protected from moisture, or extremes of heat or cold. The refrigerator may not function properly if the temperature rises above +30 °C (standard models). The refrigerator meets the operating conditions according to climate class 4.

**NEVER USE AN EXTENSION LEAD.** If the mains cable will not reach the nearest socket, either rearrange your store layout or ask a qualified electrician to fit a new socket.

If power is cut off, wait for at least 5 minutes before plugging the unit in again to avoid damaging the compressor.

Do not place combustible, explosive or volatile articles, corrosive acid or alkali, or liquid in glass containers into the chiller.





## PLUG IN

Once plugged in the display will show the temperature inside the chiller and the compressor will run late on. This temperature is the actual temperature recorded by the probes inside the chiller and as the chiller cools to the set point so the number on the display will descend accordingly.


## OPERATING FRONT PANEL DISPLAY



### Temperature adjustment

Press  or  button once, the current set point will flash display, then Press  or  button to adjust the set temperature to your desired value.

### Interior light control

Press the button  on the control panel, the LED light will come on, and press again to turn it off.

## Defrosting

The system will defrost periodically automatically, this is to stop the build of ice on the evaporator which would reduce cooling performance. Whilst on defrosting the compressor will stop working and the temperature inside the chiller will rise slowly. After about 30 minutes the defrost period is complete the compressor will work as normal.

## CLEANING

1. UNPLUG your chiller and remove any stock to a suitable back-up chiller.
2. Clean the inner compartment with warm water and neutral detergent. DO NOT allow the control panel, cables or plug to get wet.  
NEVER use corrosive detergents, wire brushes, or abrasive scourers to clean your chiller.  
NEVER use metal or sharp implements to remove debris.
3. Use mild soapy water to clean the gasket and seals.
4. Dry all surface thoroughly.

## REPLACING LAMPS

- 1 Unplug the power plug.
2. Remove the screws on the light cover, take down the lamp cover, pull out the wires, then take away the lamp.
3. Install the new lamp, connect the wires, place the lamp cover and fasten it.
- 4.**Caution: If the lamp is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.**

- **WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.**
- **WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.**
- **WARNING: Do not damage the refrigerant circuit.**

**NOTE 101** This warning is only applicable for appliances with refrigerating circuits which are accessible by the user.

- **WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.**

The ambient temperature and humidity conditions of the climate class following the tab below

Test room climate class	Dry bulb temperature (°C)	Relative humidity (%)	Dew point (°C)	Water vapour mass in dry air (g/kg)
0	20	50	9.3	7.3
1	16	80	12.6	9.1
8	23.9	55	14.3	10.2
2	22	65	15.2	10.8
3	25	60	16.7	12.0
4	30	55	20.0	14.8
6	27	70	21.1	15.8
5	40	40	23.9	18.8
7	35	75	30.0	27.3

**NOTE** the water vapour mass dry air is one of the main points influencing the performance and the energy consumption of the cabinets. Therefore, the order of the climate class in the table is based on the water vapour mass column. See also Annex B to compare lab and store conditions.



**R600A refrigerant is used for this equipment**

## Caution!

Consult repair manual/owner's guide before attempting to install or service this product. All safety precautions must be followed. Dispose of properly in accordance with federal or local regulations.

Risk of fire or explosion due to puncture of refrigerant tubing. Follow handling instructions carefully.

## **Danger!**

Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not use mechanical devices to defrost refrigerator. Do not puncture refrigerant tubing.

## **Disposal**



EU regulations require refrigeration product to be disposed of by specialist companies who remove or recycle all gasses, metal and plastic components. Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

All packaging materials should be disposed of in an environmentally friendly way.

The cardboard maybe used as scrap paper. The protective foil and the foam cushions are CFC-free.

Do not allow children to play with the packaging and destroy plastic bags safely.



## **Environmental protection**

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).

## **Compliance**

Parts have undergone strict product testing in order to comply with regulatory standards and specification set by international, independent, and federal authorities.

Products have been approved to carry the following symbol:

